



SWAMI HELPFUL HINTS

Charging Your SWAMI

For optimal charging, IZZO recommends that you charge your SWAMI directly through your computer using the provided USB cable. (Wall and Car Charger accessories are available for purchase at www.izzo.com).

PLEASE NOTE: When charging through your computer, first make sure your SWAMI is turned **OFF** then make sure SWAMI Map Manager is running before you plug it in. Also, make sure that your computer is **NOT** set on **Sleep** or **Hibernate** mode (your SWAMI will not charge in these modes).

When the battery icon (upper right corner) stops blinking, your SWAMI is fully charged. It takes approximately 2–4 hours to fully charge your Swami.

Unlocking Your SWAMI

Like many of today's electronic products, SWAMI may lock or freeze up. To unlock your Swami simply press the Up Arrow, Down Arrow and FCB buttons all at the same time.

Common Error Messages

Below are some common error messages that may show up on your SWAMI:

E1—Current hole green is greater than 999 yards away. (may also show up when battery is running low)

E2—No course within SWAMI range. (make sure the course(s) you want to play show up in the lower left box in SWAMI Map manager)

E3—No courses loaded on SWAMI.

Searching for Courses in Map Manager

For best results while looking for courses in SWAMI Map Manager, fill in the state then type in the first few letters of the course name you are interested in.

*Please refer to user manual for this process before calling us.

For any issues or questions you may have, please contact SWAMI Support at 1-800-777-7899.